

Contents

Introduction	B2 - B4
Series CM, ZRV	
CM..... Check.....	B5 - B6
CM2..... D03 Mounted, Check	B7 - B8
CM3..... D05 Mounted, Check	B9 - B10
CM6..... D08 Mounted, Check	B11 - B12
ZRV D03, D05 Mounted, Check.....	B60 - B62
Series CPOM, ZRE	
CPOM..... Double Pilot Operated, Check.....	B13 - B14
CPOM2 Dimensions..... D03 Mounted, Double Pilot Operated, Check.....	B15
CPOM3 Dimensions..... D05 Mounted, Double Pilot Operated, Check.....	B16
CPOM6 Dimensions..... D08 Mounted, Double Pilot Operated, Check.....	B17
ZRE D03, D05, D07 Mounted, Double Pilot Operated Check.....	B57 - B59
Series FM, ZRD	
FM Double Manapak, Flow Control.....	B18 - B20
FM2 Dimensions D03 Mounted, Double, Flow Control	B21
FM3 Dimensions D05 Mounted, Double, Flow Control	B22
FM6 Dimensions D08 Mounted, Double, Flow Control	B23
ZRD D03, D05, D07 Mounted, Double Flow Control.....	B53 - B56
Series PRDM	
PRDM..... Direct Operated, Pressure Reducing	B24 - B27
PRDM2 Dimensions D03 Mounted, Direct Operated, Pressure Reducing	B28
PRDM3 Dimensions D05 Mounted, Direct Operated, Pressure Reducing	B28
Series PRM, ZDR	
PRM Pressure Reducing	B29 - B31
PRM3 Dimensions..... D05 Mounted, Pressure Reducing.....	B32 - B34
PRM6 Dimensions..... D08 Mounted, Pressure Reducing.....	B35
ZDR D03, D05, D07, Pilot Operated, Pressure Reducing.....	B42 - B44
Series RM, ZDV	
RM..... Relief.....	B36 - B38
RM2 Dimensions D03 Mounted, Relief	B39
RM3 Dimensions D05 Mounted, Relief	B40
RM6 Dimensions D08 Mounted, Relief	B41
ZDV..... D03, D05, D07 Mounted, Relief	B45 - B48
Series ZNS	
ZNS D03, D05 Mounted, Counterbalance Valve	B49 - B52
Installation Information.....	B63 - B65
Mounting Pattern Dimensions	B64 - B65

B