

## Contents

### Series D1V (NFPA D03/CETOP 3, NG6 Mounting)

Introduction and Technical Information .....	A2 - A15
Series D1V .....	Solenoid Operated..... A17 - A28
Accessories .....	A29 - A30
Series D1VA and D1VP .....	Air and Oil Pilot Operated..... A31 - A34
Series D1VC, D1VD and D1VG .....	Cam and Cam Lever Operated..... A35 - A36
Series D1VL .....	Lever Operated..... A37 - A38
Installation .....	Series D1V..... A39 - A40

### Series D1SE (NFPA D03/CETOP 3, NG6 Mounting)

Series D1SE .....	Solenoid Operated..... A41 - A43
-------------------	----------------------------------

### Series D3 (NFPA D05/CETOP 5, NG10 Mounting)

Introduction and Technical Information .....	A44 - A51
Series D3W .....	Solenoid Operated..... A53 - A61
Accessories .....	A62
Series D3DW .....	Solenoid Operated..... A63 - A67
Series D3A .....	Air Operated..... A68 - A70
Series D3C and D3D .....	Cam Operated..... A71 - A72
Series D3L .....	Lever Operated..... A73 - A74
Installation .....	Series D3..... A75 - A76

### Series D31 (NFPA D05H/CETOP 5H, NG10 Mounting)

Introduction and Technical Information .....	A78
Series D31 .....	Pilot Operated, Solenoid Controlled..... A79 - A91
Accessories .....	A92
Series D31NW .....	Pilot Operated, Solenoid Controlled..... A93 - A100
Accessories .....	A101
Series D31*A .....	Air Pilot Operated..... A102 - A103
Series D31*L .....	Lever Operated..... A104 - A105
Series D3P .....	Oil Pilot Operated..... A106 - A107
Installation .....	Series D31, D3P..... A108 - A112

### Series D41 (NFPA D07/CETOP 7, NG16 Mounting)

Introduction and Technical Information .....	A114
Series D41VW .....	Pilot Operated, Solenoid Controlled..... A115 - A122
Accessories .....	A123
Series D4L .....	Lever Operated..... A124 - A127
Series D4P .....	Oil Pilot Operated..... A128 - A131
Installation .....	Series D4..... A133 - A135

### Series D61 (NFPA D08/CETOP 8, NG25 Mounting)

Introduction and Technical Information .....	A136
Series D61V .....	Pilot Operated, Solenoid Controlled..... A137 - A147
Accessories .....	A148
Series D61VA .....	Air Pilot Operated..... A149 - A150
Series D61VL .....	Lever Operated..... A151 - A152
Series D6P .....	Oil Pilot Operated..... A153 - A154
Installation .....	Series D61, D6P..... A155 - A158

### Series D81 (NFPA D08/CETOP 8, NG25 Mounting)

Introduction and Technical Information .....	A160
Series D81V .....	Pilot Operated, Solenoid Controlled..... A161 - A171
Accessories .....	A172
Series D81VA .....	Air Pilot Operated..... A173 - A174
Series D81VL .....	Lever Operated..... A175 - A176
Series D8P .....	Oil Pilot Operated..... A177 - A178
Installation .....	Series D81, D8P..... A179 - A182
Series D9L .....	Lever Operated..... A183 - A186

### Series D101 (NFPA D10/CETOP 10, NG32 Mounting)

Introduction and Technical Information .....	A188
Series D101V .....	Pilot Operated, Solenoid Controlled..... A189 - A199
Accessories .....	A200
Series D101VA .....	Air Pilot Operated..... A201 - A202
Series D101VL .....	Lever Operated..... A203 - A204
Series D10P .....	Oil Pilot Operated..... A205 - A206
Installation .....	Series D101, D10P..... A207 - A210

### Series D111 (NFPA D10/CETOP 10, NG32 Mounting)

Series D111VW .....	Pilot Operated, Solenoid Controlled..... A211 - A219
Installation .....	A220 - A222

### Series D4S (NG10, NG25, NG32)

Series D4S .....	Directional Seat Valve..... A223 - A232
------------------	---

### Series D5S (SAE Flange)

Series D5S .....	Directional Seat Valve, SAE Flange..... A233 - A247
------------------	---

D1.indd, dd

