

Valve Function / Series Index

Function/Series	Page	Function/Series	Page			
Directional Control Valves						
D1SE	Solenoid Operated.....	A41	CM	Check.....	B5	
D1VA	Air and Oil Pilot Operated.....	A31	CPOM.....	Dbl. P. O., Check	B13	
D1VC.....	Cam, Cam Lever Operated.....	A35	FM	Dbl. Sandwich, Flow Control.....	B18	
D1VD	Cam, Cam Lever Operated.....	A35	PRDM.....	D. O., Pressure Reducing	B24	
D1VG.....	Cam, Cam Lever Operated.....	A35	PRM.....	Pressure Reducing	B29	
D1VHW.....	Solenoid Operated.....	A2	RM.....	Relief	B36	
D1VL.....	Lever Operated.....	A37	ZDR	P.O. Pressure Reducing.....	B42	
D1VP	Air and Oil Pilot Operated.....	A31	ZDV.....	Relief	B45	
D1VW	Solenoid Operated.....	A2	ZNS	Counterbalance	B49	
D10P.....	Oil Pilot Operated	A205	ZRD	Dbl. Flow Control	B53	
D101VA	Air Pilot Operated	A201	ZRE	Dbl. P.O. Check	B57	
D101VL.....	Lever Operated.....	A203	ZRV.....	Check.....	B60	
D101VHW.....	P. O., Solenoid Controlled	A188	Pressure Control Valves			
D101VW	P. O., Solenoid Controlled	A188	PR*M	See R4R	D28	
D111VW	P. O., Solenoid Controlled	A211	PSB	EH Pressure Switch.....	C34	
D3A.....	Air Operated	A68	R*R, R*M	See R4V*5, R6V*5	D3	
D3C	Cam Operated	A71	R1E02.....	Pressure Reducing	D74	
D3D	Cam Operated	A71	R4R	Pressure Reducing	D26	
D3DW	Solenoid Operated.....	A63	R4S.....	Pilot Operated Sequence	D36	
D3L.....	Lever Operated.....	A73	R4U	Pressure Reducing, Unloading...	D19	
D3*P	Oil Pilot Operated	A106	R4V.....	Pressure Relief, Pilot Operated ..	D68	
D3W.....	Solenoid Operated.....	A44	R4V*5	Pressure Relief, Vent	D3	
D31*A	Air Pilot Operated	A102	R5R	Pressure Relief, Pilot Operated ..	D55	
D31*L.....	Lever Operated.....	A104	R5S.....	Sequence, Pilot Operated.....	D65	
D31*W	P. O., Solenoid Controlled	A78	R5U	Unloading, Pilot Operated	D60	
D31NW	P. O., Solenoid Controlled	A93	R5V.....	Pressure Relief, Pilot Operated ..	D49	
D41VW	P. O., Solenoid Controlled	A114	R6V*5	Pressure Relief, Vent	D3	
D4L.....	Lever Operated.....	A124	RS*R, RS*M	See R4V*5, R6V*5	D3	
D4P.....	Oil Pilot Operated	A128	S*M.....	See R4S	D36	
D4S.....	Directional Seat Valve.....	A223	UR*M	See R4U	D19	
D5S.....	Directional Seat Valve.....	A233	US*M	See R4U	D19	
D6P.....	Oil Pilot Operated	A153	VB.....	Direct Operated Sequence	D40	
D61VA	Air Pilot Operated	A149	VBY	Pilot Operated Sequence	D44	
D61VL.....	Lever Operated.....	A151	VM	D. O. Pressure Reducing	D30	
D61VHW.....	P. O., Solenoid Controlled	A136	VS.....	Pressure Relief	D16	
D61VW	P. O., Solenoid Controlled	A136	Flow Control and Check Valves			
D8P.....	Oil Pilot Operated	A177	2F1C.....	Flow Control.....	E2	
D81VA	Air Pilot Operated	A173	C4V.....	D.O. Check	E8	
D81VL.....	Lever Operated.....	A175	C4V.....	P.O. Check	E12	
D81VHW.....	P. O., Solenoid Controlled	A160	C5P.....	P.O. Check	E15	
D81VW	P. O., Solenoid Controlled	A160	C5V.....	D.O. Check	E18	
D9L.....	Lever Operated.....	A183	Terms of Sale and Warranty Limitations			E21
Safety Guide.....				E22 - E23		