

Series	Page	Series	Page
2F1C..... Flow Control.....	E2	D6 Subplates & Manifolds	C14 - C18
C4V..... D.O. Check.....	E8	D61VA Air Pilot Operated	A149
C4V..... P.O. Check	E12	D61VL..... Lever Operated.....	A151
C5P..... P.O. Check	E15	D61VHW..... P. O., Solenoid Controlled	A136
C5V..... D.O. Check.....	E18	D61VW P. O., Solenoid Controlled	A136
CM..... Check.....	B5	D8P..... Oil Pilot Operated	A177
CPOM..... Dbl. P.O., Check	B13	D8 Subplates & Manifolds	C14 - C18
D1SE..... Solenoid Operated.....	A41	D81VA Air Pilot Operated	A173
D1V Subplates & Manifolds	C2 - C6	D81VL..... Lever Operated.....	A175
D1VA..... Air and Oil Pilot Operated.....	A31	D81VHW..... P. O., Solenoid Controlled	A160
D1VC..... Cam, Cam Lever Operated.....	A35	D81VW P. O., Solenoid Controlled	A160
D1VD Cam, Cam Lever Operated.....	A35	D9L..... Lever Operated.....	A183
D1VG..... Cam, Cam Lever Operated.....	A35	FM Dbl. Sandwich, Flow Control.....	B18
D1VHW..... Solenoid Operated.....	A2	PR*M See R4R	D28
D1VL..... Lever Operated.....	A37	PRDM..... D. O., Pressure Reducing	B24
D1VP..... Air and Oil Pilot Operated.....	A31	PRM..... Pressure Reducing	B29
D1VW Solenoid Operated.....	A2	PSB EH Pressure Switch.....	C34
D10P..... Oil Pilot Operated	A205	R*R, R*M..... See R4V*5, R6V*5	D3
D101VA Air Pilot Operated	A201	R1E02..... Pressure Reducing	D74
D101VL..... Lever Operated.....	A203	R4R Pressure Reducing	D26
D101VHW..... P. O., Solenoid Controlled	A188	R4S..... Pilot Operated Sequence	D36
D101VW P. O., Solenoid Controlled	A188	R4U Pressure Reducing, Unloading...	D19
D111VW P. O., Solenoid Controlled	A211	R4V..... Pressure Relief, Pilot Operated ..	D68
D3A..... Air Operated	A68	R4V*5 Pressure Relief, Vent	D3
D3A Subplates & Manifolds	C7 - C8	R5R Pressure Relief, Pilot Operated ..	D55
D3C Cam Operated	A71	R5S..... Sequence, Pilot Operated.....	D65
D3D Cam Operated	A71	R5U Unloading, Pilot Operated	D60
D3DW Solenoid Operated.....	A63	R5V..... Pressure Relief, Pilot Operated ..	D49
D3DW Subplates & Manifolds	C7 - C8	R6V*5 Pressure Relief, Vent	D3
D3L..... Lever Operated.....	A73	RM..... Relief	B36
D3L Subplates & Manifolds	C7 - C8	RS*R, RS*M See R4V*5, R6V*5	D3
D3*P Oil Pilot Operated	A106	S*M..... See R4S	D36
D3P Subplates & Manifolds	C9 - C13	Subplate & Manifold Accessories & Installation.....	C19 - C33
D3W Solenoid Operated.....	A44	UR*M See R4U	D19
D3W Subplates & Manifolds	C7 - C8	US*M See R4U	D19
D31 Subplates & Manifolds	C9 - C13	VB..... Direct Operated Sequence	D40
D31*A Air Pilot Operated	A102	VBY Pilot Operated Sequence	D44
D31*L..... Lever Operated.....	A104	VM D. O. Pressure Reducing	D30
D31*W P. O., Solenoid Controlled	A78	VS..... Pressure Relief	D16
D31NW P. O., Solenoid Controlled	A93	ZDR P.O. Pressure Reducing.....	B42
D41VW P. O., Solenoid Controlled	A114	ZDV..... Relief	B45
D4L..... Lever Operated.....	A124	ZNS Counterbalance	B49
D4P..... Oil Pilot Operated	A128	ZRD Dbl. Flow Control	B53
D4S..... Directional Seat Valve	A223	ZRE Dbl. P.O. Check	B57
D5S..... Directional Seat Valve	A233	ZRV..... Check.....	B60
D6P..... Oil Pilot Operated	A153		